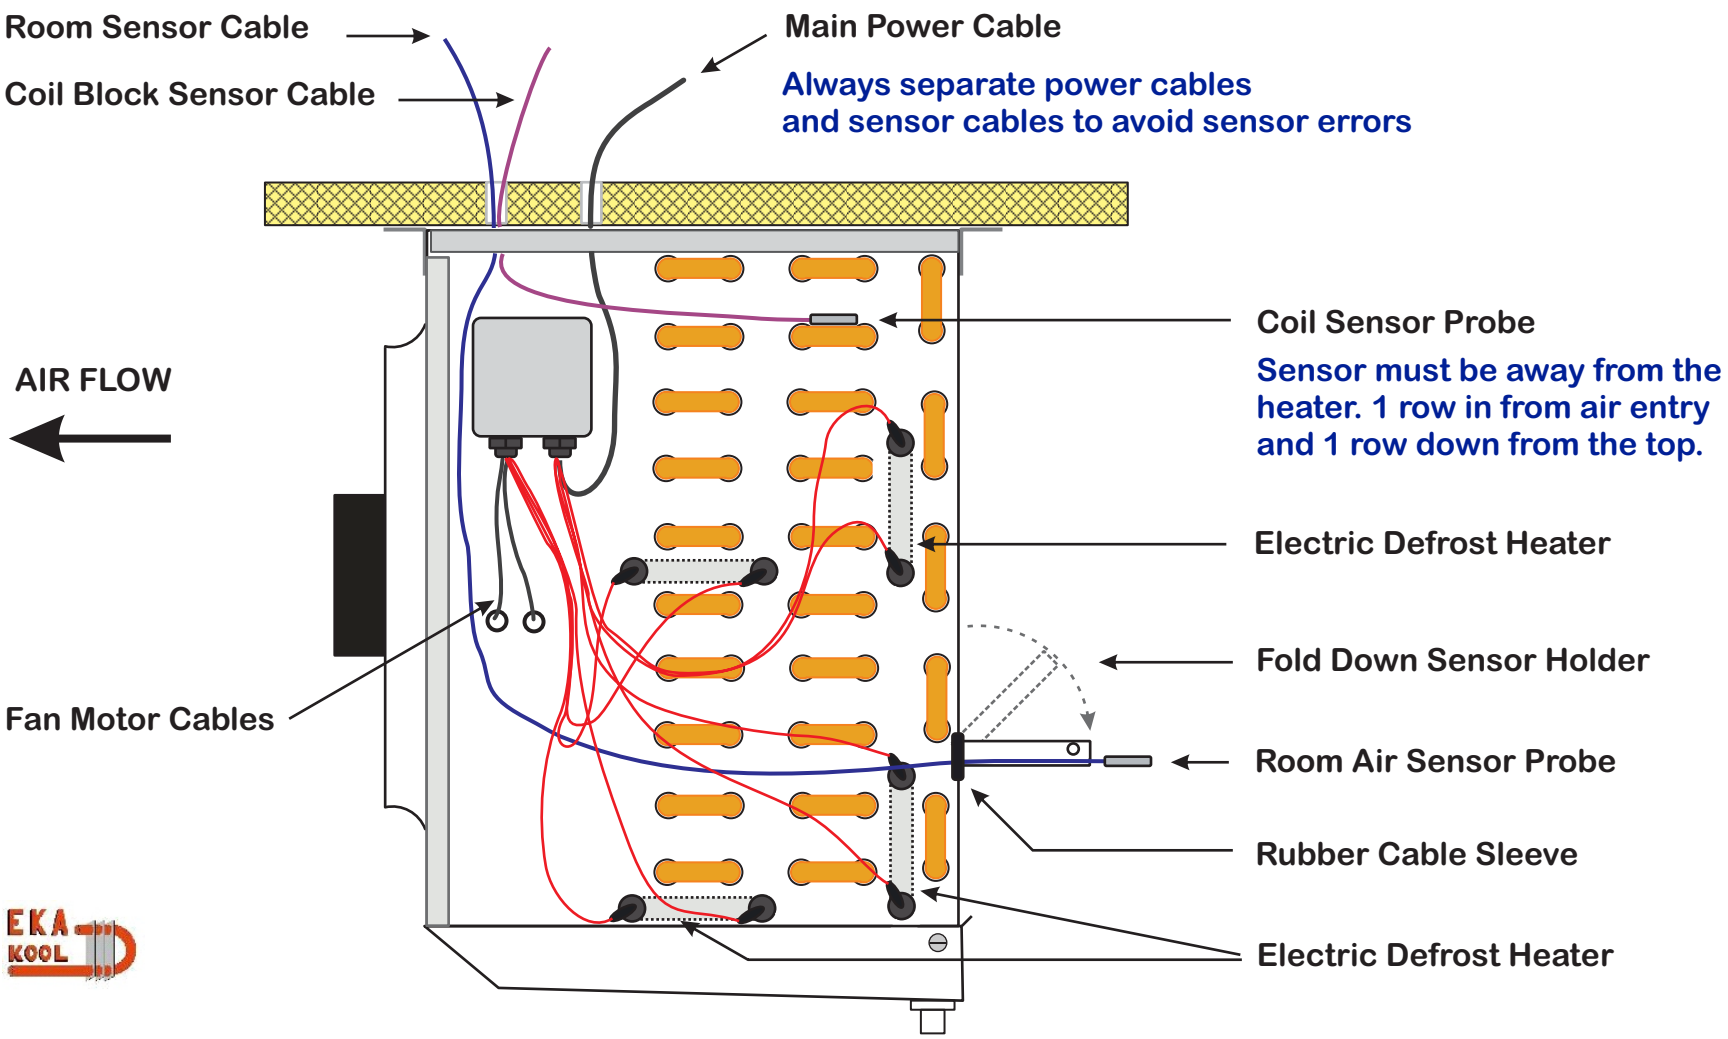
Room Sensor Cable
Coil Block Sensor Cable
Main Power Cable
Always separate power cables
and sensor cables to avoid sensor errors
AIR FLOW
Coil Sensor Probe
Sensor must be away from the
heater. 1 row in from air entry
and 1 row down from the top.
Electric Defrost Heater
Fold Down Sensor Holder
Fan Motor Cables
Room Air Sensor Probe
Rubber Cable Sleeve
Electric Defrost Heater
EKA
KOOL